

## ROD A5 HOOK-ON LEAFLET HOLDER WALL DISPLAY INSTALLATION GUIDE

Please check you have all the components before you start assembling



Wall  
Mount




Rod



2mm & 2.5mm  
Allen Key



Acrylic  
Pocket

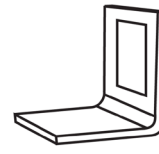


Acrylic  
Bracket


### Installation Steps

1. Lay out the assembled display on a flat surface before installation to check the measurements between the wall mounts. The distances between wall mounts should correspond to the measurements on the illustration below (every 500mm). NOTE: the mounts/rod require accurate fitting or some pockets will not fit.


#### 3 Pocket A5



#### 6 Pocket A5




#### 9 Pocket A5



2. Check the upper most position of the display which will be the top of the pocket. Using a spirit level mark a horizontal pencil line in the desired position. Mark the drill points along the line. Drill the holes and insert the appropriate wall plug for the wall type.
3. The wall mounts have a small 1.5mm grub screw which when loosened releases the brass wall fixing plate. This has a countersunk side which is the side that the screw passes through to fix to the wall.
4. Once the wall fixing plate is attached to the wall place the silver body of the wall plate over the top and tighten the small grub screw (do not overtighten).
5. Once all the wall mounts are attached to the wall you can loosen the larger grub screws and fit the rod. Once in place tighten all the grub screws including the smaller ones.
6. Before hooking on the pockets attach the acrylic wall brackets to the BACK of the pockets towards the bottom. Hang on the pockets.



Underside of wall mount

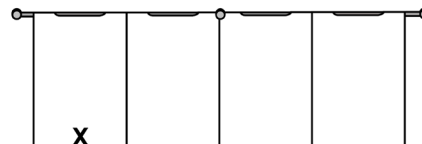

**X= Stick the acrylic bracket here, to the back of the pocket**